
Exhauster

24C

Exhauster

24C-01 To remove and to fit 24C.02

24C

Exhauster

To remove and to fit

24C-01

To remove

- 1 Disconnect the lubricating oil and vacuum pipes from the exhauster and fit covers to the openings.
- 2 Release the setscrews and remove the exhauster.

To fit

- 1 Ensure that the joint faces of the exhauster and the timing case are clean and renew the joint. Fit the exhauster to the timing case and tighten the setscrews.
- 2 Remove the covers from the openings and connect the oil pipe and the vacuum pipe to the exhauster.