


# RENAULT

## Trucks

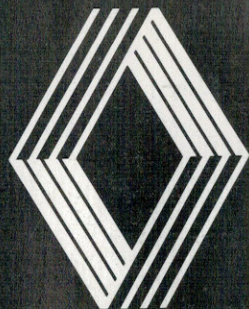

### Renault Truck Industries Limited

Boscombe Road, Dunstable, Bedfordshire LU5 4LX  
Tel 0582 471122 Telex 82191

# driving maintenance

## contents

|                                                                | Pages |
|----------------------------------------------------------------|-------|
| ALPHABETICAL INDEX .....                                       | 2     |
| SPECIFICATIONS .....                                           | 5     |
| EQUIPMENT .....                                                | 9     |
| DRIVING .....                                                  | 24    |
| WARRANTY INSPECTION - LUBRICATION<br>SERVICING SCHEDULES ..... | 31    |
| SERVICING .....                                                | 40    |
| ELECTRICAL EQUIPMENT .....                                     | 72    |

|                                     | Pages |
|-------------------------------------|-------|
| <b>A</b>                            |       |
| Alternator . . . . .                | 74    |
| Air cleaner . . . . .               | 41    |
| Air line filter . . . . .           | 66    |
| Air reservoir . . . . .             | 65    |
| Air restriction indicator . . . . . | 41    |
| Air system . . . . .                | 64    |
| Anti-freeze . . . . .               | 39-43 |
| Auto. transmission . . . . .        | 28-57 |

|                                          |       |
|------------------------------------------|-------|
| <b>B</b>                                 |       |
| Battery . . . . .                        | 72    |
| Bleeding fuel system . . . . .           | 47    |
| Brake antifreeze . . . . .               | 22    |
| Brake fluid level . . . . .              | 68    |
| Brakes . . . . .                         | 70    |
| Brake system . . . . .                   | 64    |
| Brake warning light and buzzer . . . . . | 27-69 |
| Bodywork . . . . .                       | 6     |
| Bonnet release . . . . .                 | 13    |
| Bulbs . . . . .                          | 75    |

|                          |    |
|--------------------------|----|
| <b>C</b>                 |    |
| Cab protection . . . . . | 31 |
| Capacities . . . . .     | 7  |
| Carburettor . . . . .    | 51 |
| Clutch . . . . .         | 55 |
| Cold starting . . . . .  | 25 |
| Cooling system . . . . . | 42 |

|                             |    |
|-----------------------------|----|
| <b>D</b>                    |    |
| Dampers . . . . .           | 63 |
| Diesel engine . . . . .     | 44 |
| Disc brakes . . . . .       | 70 |
| Doors and windows . . . . . | 11 |
| Drive belts . . . . .       | 53 |

|                       |    |
|-----------------------|----|
| Driving . . . . .     | 24 |
| Drum brakes . . . . . | 71 |

|                                          |    |
|------------------------------------------|----|
| <b>E</b>                                 |    |
| Emergency charging air system . . . . .  | 65 |
| Engine access (bonnet release) . . . . . | 13 |
| Engine covers . . . . .                  | 14 |
| Engine - diesel . . . . .                | 44 |
| Engine - petrol . . . . .                | 49 |
| Engine speed adjustment . . . . .        | 48 |

|                                |    |
|--------------------------------|----|
| <b>F</b>                       |    |
| Fuel filter - diesel . . . . . | 46 |
| Fuel filter - petrol . . . . . | 50 |
| Fuel injection pump . . . . .  | 48 |
| Fuel pump - diesel . . . . .   | 45 |
| Fuel pump - petrol . . . . .   | 49 |
| Fuses . . . . .                | 74 |

|                                      |    |
|--------------------------------------|----|
| <b>G</b>                             |    |
| Gearbox - automatic . . . . .        | 57 |
| Gearbox - manual . . . . .           | 56 |
| Gear changing - manual . . . . .     | 27 |
| Gear selection - automatic . . . . . | 28 |

|                                   |       |
|-----------------------------------|-------|
| <b>H</b>                          |       |
| Handbrake . . . . .               | 26-71 |
| Headlamp adjustment . . . . .     | 76    |
| Heating and ventilation . . . . . | 16    |
| Hydraulic system . . . . .        | 55-68 |

|                            |       |
|----------------------------|-------|
| <b>I</b>                   |       |
| Ignition switch . . . . .  | 24    |
| Ignition system . . . . .  | 51-52 |
| Injectors . . . . .        | 48    |
| Instrument panel . . . . . | 9-10  |

**J**  
Jump starting . . . . . 73

## K

## L

Lighting switches . . . . . 23  
Load sensing valve . . . . . 69  
Lubricants . . . . . 38

## M

## N

## O

Oil changing . . . . . 40  
Oil filters . . . . . 40  
Operator checks . . . . . 33

## P

Parking brake . . . . . 26  
Petrol engine . . . . . 49  
Power steering . . . . . 62  
Propeller shaft . . . . . 58

## Q

## R

Rear axle . . . . . 59  
Rear doors . . . . . 12  
Running in . . . . . 27

## S

Safety belts . . . . . 15  
Safety operations . . . . . 32

Seats . . . . . 12  
Servicing schedules . . . . . 33  
Sound insulation . . . . . 14  
Spare wheel . . . . . 19  
Sparking plugs . . . . . 52  
Specifications . . . . . 5  
Spring brake . . . . . 67  
Starter switch . . . . . 24  
Starting . . . . . 25  
Steering column switch . . . . . 23  
Steering – manual . . . . . 61  
Steering – power . . . . . 62  
Stopping . . . . . 25  
Suspension . . . . . 63

## T

Tyre pressures . . . . . 8  
Tyres . . . . . 20  
Towing . . . . . 30

## U

## V

Vacuum system . . . . . 64  
Ventilation . . . . . 16

## W

Wheel fitting instructions . . . . . 18  
Wheels . . . . . 19  
Windscreen wipers and washers . . . . . 21  
Water trap . . . . . 44

## X

## Y

## Z