



RECOMMENDED SERVICE INSPECTIONS

CHECK:	8,000 KM	25,000 KM
<u>RELAY BOX</u> Functioning Check contact condition Check tighten terminal nuts	*	* * *
<u>FOOT CONTROL CUT-OFF SWITCH</u> Functioning and condition	*	*
<u>BATTERY FUSE</u> [IF FITTED] Functioning and condition	*	*
<u>HAND CONTROL</u> [IF FITTED] Functioning and condition	*	*
<u>FOOT CONTROL SWITCH</u> Functioning and condition Striker setting and condition [IF FITTED]	* *	* *
<u>THROTTLE INHIBITOR</u> [IF FITTED] Functioning and condition	*	*
<u>MINI GENERATOR</u> [IF FITTED] Functioning and condition	*	*
<u>STANDSTILL DETECTOR</u> Functioning (refer to road test) Condition	* *	* *
<u>INERTIA GOVERNOR</u> [IF FITTED] Functioning and condition	*	*
<u>WARNING LIGHT</u> Functioning	*	*
<u>COMPLETE ELECTRICAL CONTROL SYSTEMS</u> Functioning Check wiring loom condition	*	* *
<u>ROAD TEST</u> Performance and Function Check that the retarder cuts out when the vehicle comes to rest with the foot brake still depressed. Note: Hand Control, if fitted, operates the retarder independently of the Standstill Detector System and should be set to OFF to allow checking of the Standstill System.	* *	* *