

STEERING

Index to Sub-sections

DATA	L020
Tightening torques	page 1
Data	page 2
SPECIAL TOOLS	L030
DESCRIPTION AND MODIFICATIONS	L040
FAULT DIAGNOSIS	L050
STEERING COLUMN	L100
To Remove	page 1
To Refit	page 1
To Dismantle	page 2
To Reassemble	page 4
STEERING BOX	L110
To Remove	page 1
To Refit	page 1
To Dismantle	page 4
To Reassemble	page 4
STEERING LINKAGE	L200
Drop arm — to remove and refit	page 1
Steering stops — to adjust	page 2
Side steering rod — to remove and refit	page 3
Track rod — to remove and refit	page 3
Universal joint — to remove and refit	page 4
Ball joint assemblies — to remove and refit	page 4
Upper steering arm — to remove and refit	page 5
Lower steering arm — to remove and refit	page 6