

POWER ASSISTED STEERING

Index to Sub-sections

DESCRIPTION AND MODIFICATIONS	L 304
STEERING BOX	L 310
Operation	page 1
To Remove	page 4
To Refit	page 5
Overhaul	page 6
Cross shaft adjustment	page 6
Drop arm — to remove and refit.	page 7
Steering stops — adjustment	page 7
POWER STEERING — GENERAL	L 320
Fitting new belts	page 1
Belt adjustment	page 1
POWER STEERING PUMP — BELT DRIVEN	L 321
POWER STEERING PUMP — COMPRESSOR DRIVEN	L 322
HYDRAULIC SYSTEM — GENERAL	L 330
System Failure	page 1
Bleeding the system	page 1
RESERVOIR	L 331
PIPES AND HOSES	L 332