

SECTION M**BRAKES****INDEX TO SUB-SECTIONS****BRAKE DATA M 010**

Load Sensing Valve page 5

SPECIAL TOOLS M 020**DESCRIPTION AND MODIFICATIONS M 031****FAULT DIAGNOSIS M 040****WHEEL UNITS — General M 100**

Preventive Maintenance page 1

Brake Drums — remove/refit page 1

WHEEL UNITS — FRONT

Vacuum/hydraulic M 111

Air/hydraulic M 112

WHEEL UNITS — REAR

Vacuum/hydraulic M 121

Air/hydraulic M 122

MASTER CYLINDER

Vacuum/hydraulic M 211

Air/hydraulic M 212

BRAKES**Index****SERVO UNITS**

General	M 220
Girling — Type 65	M 221
Girling — Type 100	M 222

BLEEDING THE HYDRAULIC SYSTEM M 230**LOAD SENSING VALVE M 241****HANDBRAKE AND LINKAGE M 311****SPRING BRAKE AND COMPENSATOR M 312****AIR CONTROL VALVES**

Dual Brake Valve — Air/hydraulic	M 411
Hand Control Valve — Air/hydraulic	M 421
Auto-Release Valve — Air/hydraulic	M 431

AIR LINE VALVES

Governor Valve — Air/hydraulic	M 511
Quadruple Charge Protection Valve — Air/hydraulic	M 512
Quick Release Valve — Air/hydraulic	M 513
Anti-freeze Unit — Air/hydraulic	M 521
Tandem Actuator — Air/hydraulic	M 522
In-line Filter — Air/hydraulic	M 523
Low Pressure Warning Switches And Stop Light Switch	M 524

AIR RESERVOIRS AND FITTINGS M 610**COMPRESSORS M 620****EXHAUSTERS**

4.236 Engine	M 631
6.247 Engine	M 632