



- | | | | | | |
|--|---|--|---|--|---|
| 1. Side repeater flasher – right hand | 17. Hazard warning switch | 32. Hazard warning switch illumination | 48. Rear fog light warning light | 64. Oil pressure switch | 80. Vacuum solenoid valve |
| 2. Head light – right hand dip and main beam | 18. Flasher unit | 33. Blower switch illumination | 49. Hazard warning light | 65. Temperature sender unit | 81. Starter relay – M2 automatic |
| 3. Side light – right hand | 19. Blower motor switch | 34. Heater controls illumination | 50. Alternator warning light | 66. Thermostat – Q1 & Q3 engines only | 82. Choke pull-off control switch |
| 4. Direction indicator – right hand | 20. Fuel gauge | 35. Heater controls illumination | 51. Starter switch | 67. Brake fluid low level switch | 83. Neutral start switch – M2 automatic |
| 5. Screenwasher motor | 21. Temperature gauge | 36. Dim dip relay | 52. Interior light – left hand | 68. 12 volt battery | 84. Heater |
| 6. Brake fluid low level switch | 22. Voltmeter | 37. Fog light switch | 53. Interior light – right hand | 69. Alternator | 85. Roofmarker connection – right hand |
| 7. Low air pressure switch (reservoir) | 23. Temperature gauge illumination | 38. Fuse unit | 54. Courtesy switch – left hand | 70. Starter relay – Q1 & Q3 engines only | 86. Rear lamps – right hand |
| 8. Low air pressure switch (reservoir) | 24. Fuel gauge illumination | 39. Stop lamp switch | 55. Courtesy switch – right hand | 71. Starter solenoid | 87. Handbrake switch |
| 9. Blower motor | 25. Oil gauge illumination | 40. Cigar lighter | 56. Low air pressure and vacuum warning buzzer | 72. Starter motor | 88. Low air pressure switch (Q.R.V.) |
| 10. Windscreen wiper motor | 26. Voltmeter illumination | 41. Electronic tachograph | 57. Direction indicator switch | 73. Spark plugs | 89. Fuel tank unit |
| 11. Direction indicator – left hand | 27. Vacuum or air pressure gauge illumination | 42. Warning light buzzer | 58. Horn push | 74. Ballast resistors | 90. Rear lamps – left hand |
| 12. Side light – left hand | 28. Transmission selection illumination | 43. Direction indicator warning light | 59. Headlamp switch | 75. Ignition coil | 91. Reverse lamp switch |
| 13. Head light – left hand dip and main beam | 29. Speedometer illumination | 44. Low oil pressure warning light | 60. Lighting switch | 76. Distributor | 92. Roofmarker connection – left hand |
| 14. Side repeater flasher – left hand | 30. Speedometer illumination | 45. Main beam warning light | 61. Wiper switch | 77. Electronic ignition | 93. Van rear lamps – right hand |
| 15. Horn | 31. Fog light switch illumination | 46. Brake failure warning light | 62. Low vacuum switch | 78. Starter relay – M2 manual | 94. Van rear lamps – left hand |
| 16. Intermittent wipe relay | | 47. Parking brake warning light | 63. Fuel shut-off solenoid – Q1 & Q3 engines only | 79. Electronic speed switch | |

LEGEND		CABLE IDENTIFICATION		COLOUR CODE	
* M2 Petrol engine only	Spliced connection	Earth through fixing	E – Cab Harness	G – Green	O – Orange
	Connector	Earth through cable	F – Engine Harness	L/G – Light Green	K – Pink
	Socket and plug connection		H – Tail Harness	W – White	S – Slate
	Earth through cable		Q – Column Switch Connections	Y – Yellow	Example: RG – Red cable with Green tracer
				B – Black	