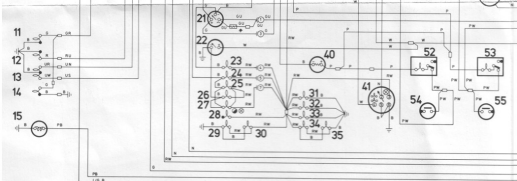

1. Side repeater flasher – right hand
2. Head light – right hand dip and main beam
3. Side light – right hand
4. Direction indicator – right hand
5. Screenwasher motor
6. Brake fluid low level switch
7. Low air pressure switch (reservoir)
8. Low air pressure switch (reservoir)
9. Blower motor
10. Windscreen wiper motor
11. Direction indicator – left hand
12. Side light – left hand
13. Head light – left hand dip and main beam
14. Side repeater flasher – left hand
15. Horn
16. Intermittent wipe relay
17. Hazard warning switch
18. Flasher unit
19. Blower motor switch
20. Fuel gauge
21. Temperature gauge
22. Voltmeter
23. Temperature gauge illumination
24. Fuel gauge illumination
25. Oil gauge illumination
26. Voltmeter illumination
27. Vacuum or air pressure gauge illumination
28. Transmission selection illumination
29. Speedometer illumination
30. Speedometer illumination
31. Fog light switch illumination
32. Hazard warning switch illumination
33. Blower switch illumination
34. Heater controls illumination
35. Heater controls illumination
36. Dim dip relay
37. Fog light switch
38. Fuse unit
39. Stop lamp switch
40. Cigar lighter
41. Electronic tachograph
42. Warning light buzzer
43. Direction indicator warning light
44. Low oil pressure warning light
45. Main beam warning light
46. Brake failure warning light
47. Parking brake warning light

LEGEND

★ M2.Petrol engine only

Spliced connection

Connector

Socket and plug connection

Earth through cable

Earth through fixing

3.5 4.6 5.6 and 6.6 Tonne variants only

7.5 Tonne variants only

CABLE IDENTIFICAT

E – Cab Harness
– Engine Harness
H – Tail Harness
Q – Column Switch Co