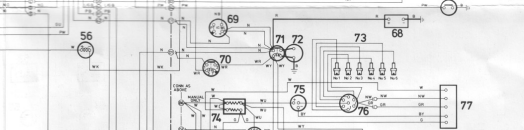


48. Rear fog light warning light
49. Hazard warning light
50. Alternator warning light
51. Starter switch
52. Interior light – left hand
53. Interior light – right hand
54. Courtesy switch – left hand
55. Courtesy switch – right hand
56. Low air pressure and vacuum warning buzzer
57. Direction indicator switch
58. Horn push
59. Headlamp switch
60. Lighting switch
61. Wiper switch
62. Low vacuum switch
63. Fuel shut-off solenoid – Q1 & Q3 engines only
64. Oil pressure switch
65. Temperature sender unit
66. Thermostat – Q1 & Q3 engines only
67. Brake fluid low level switch
68. 12 volt battery
69. Alternator
70. Starter relay – Q1 & Q3 engines only
71. Starter solenoid
72. Starter motor
73. Spark plugs
74. Ballast resistors
75. Ignition coil
76. Distributor
77. Electronic ignition
78. Starter relay – M2 manual
79. Electronic speed switch
80. Vacuum solenoid valve
81. Starter relay – M2 automatic
82. Choke pull-off control switch
83. Neutral start switch – M2 automatic
84. Heater
85. Roofmarker connection – right hand
86. Rear lamps – right hand
87. Handbrake switch
88. Low air pressure switch (Q.R.V.)
89. Fuel tank unit
90. Rear lamps – left hand
91. Reverse lamp switch
92. Roofmarker connection – left hand
93. Van rear lamps – right hand
94. Van rear lamps – left hand

ATION

Connections

| COLOUR CODE | | | | | |
|---|---|---|---|---|---|
| N | – Brown | G | – Green | O | – Orange |
| U | – Blue | L/G | – Light Green | K | – Pink |
| R | – Red | W | – White | S | – Slate |
| P | – Purple | Y | – Yellow | Example: | |
| | | B | – Black | RG | – Red cable with Green tracer |